


Screwless recessed frame - RF02 series




➔ Dimension

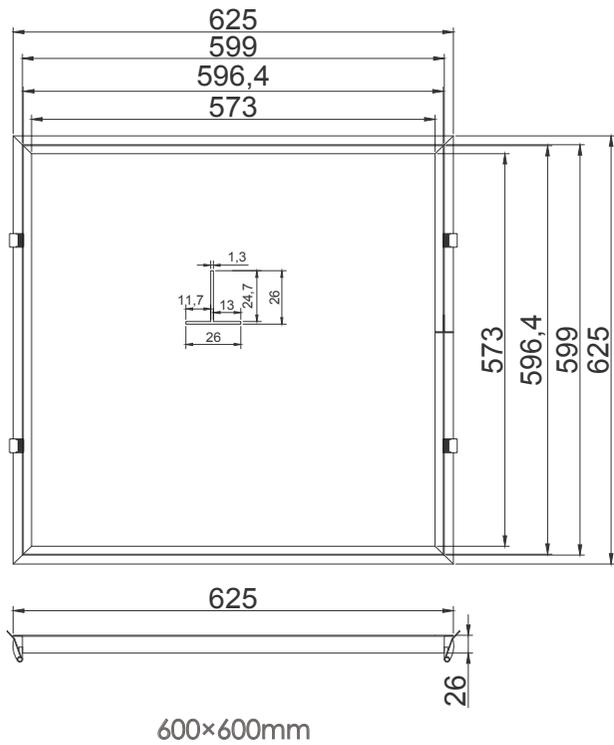


➔ Package

	Q'ty/CTN	N.W. /PCS (kg)	Size(mm)/CTN	G.W. (kg)/CTN
300*600mm	20pcs	0.40kg	670*320*220	10.00
600*600mm	20pcs	0.60kg	670*320*220	13.00
620*620mm	20pcs	0.80kg	690*320*220	17.00
300*1200mm	20pcs	0.90kg	1270*320*220	19.50
600*1200mm	20pcs	1.10kg	1270*320*220	24.00



➔ Installation

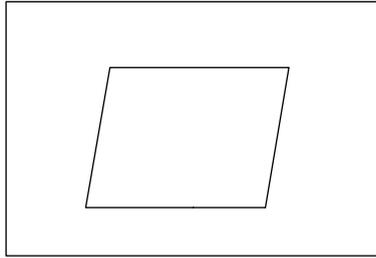


- ① Take out the connectors and Aluminum frame from package.

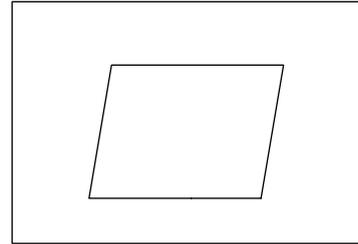


- ② Assemble the Aluminum frame and fixed by connectors one by one.

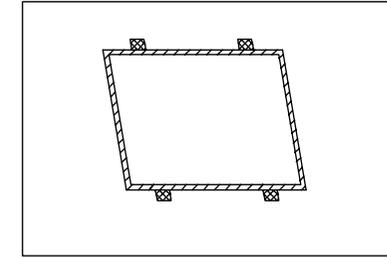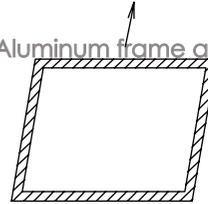


- ③ Finish assembling the Aluminum frame and test its reliability by hand.

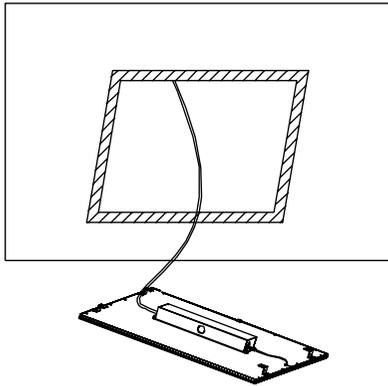

- ④ Knock the plastic anchor into ceiling, fix the Aluminum frame on the ceiling by screws.

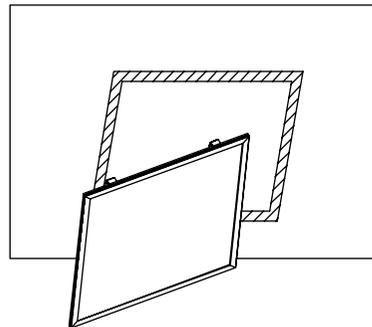

- ⑤ Take out one frame, connect the panel light to driver, insert the panel light into the frame.

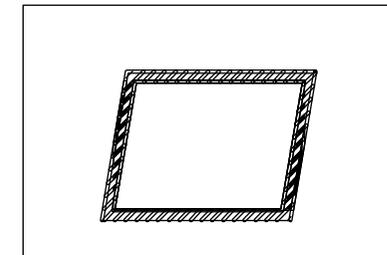

- ⑥ Make sure the frame and led panel are fixed firmly, then turn on the power