


## Recessed frame - RF04 series




→ Dimension:


600×600mm

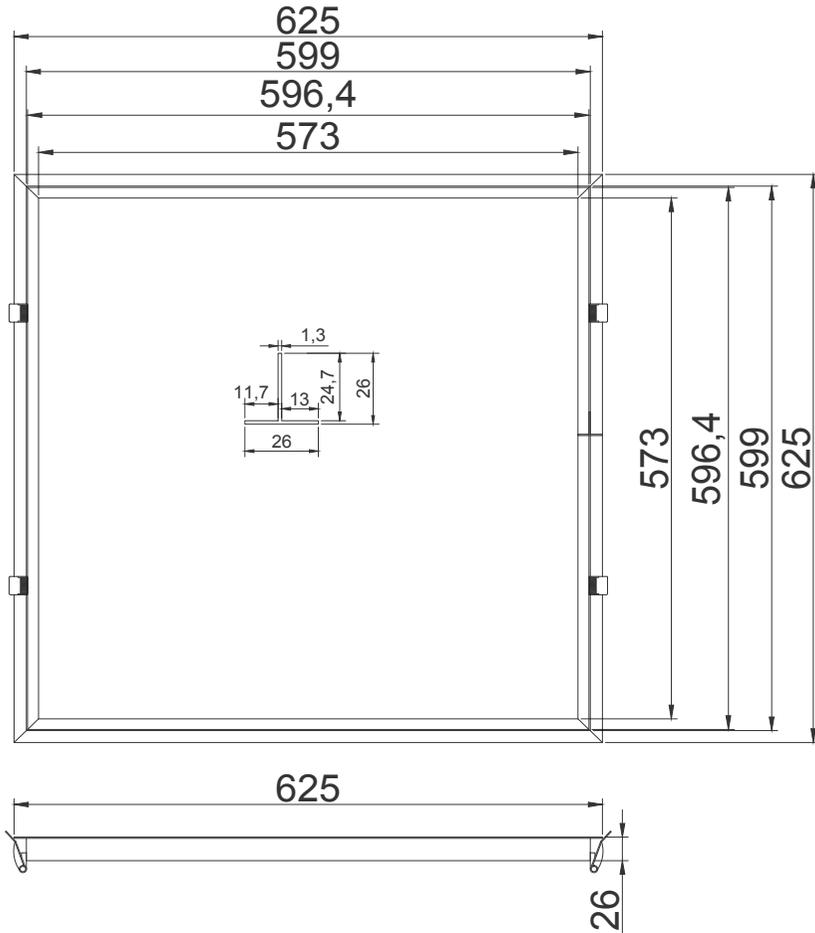

300×1200mm

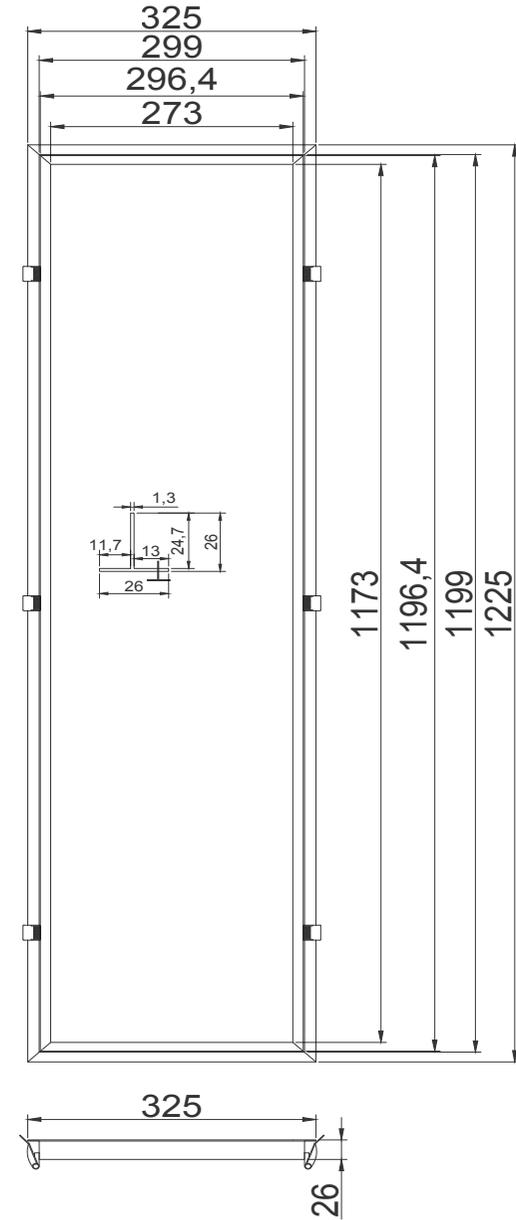


## → Installation:

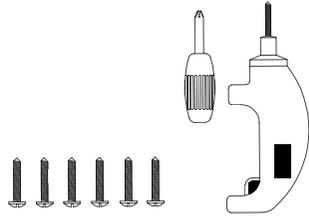


✦ ×4 + ✦ ×4 + ✦ ×4 For 300mm & 600mm led panel installation


✦ ×6 + ✦ ×6 + ✦ ×4 For 1200mm led panel installation

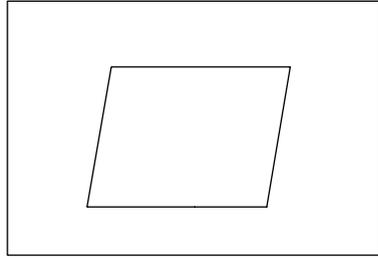


① Take out the connectors and Aluminum frame from package.

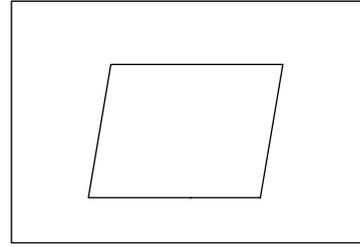


② Assemble the Aluminum frame and fixed by connectors one by one.

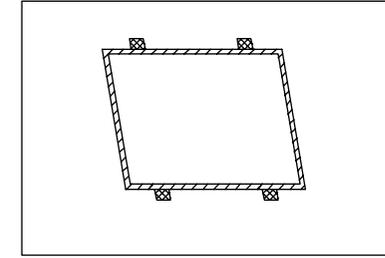


③ Finish assembling the Aluminum frame and test its reliability by hand.

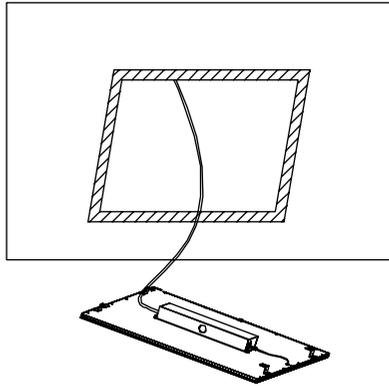

④ Knock the plastic anchor into ceiling, fix the Aluminum frame on the ceiling by screws.

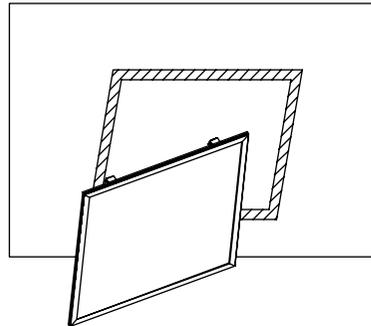

⑤ Take out one frame, connect the panel light to driver, insert the panel light into the frame.

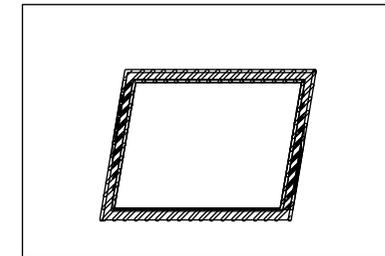

⑥ Make sure the frame and led panel are fixed firmly, then turn on the power